

Redhawk (CU) Rate Chart:

Use the following chart for initial spreader settings:

<b>REDHAWK CU40i / CU50i / CU80i</b>									
24" chain, 18" presswheel @ 7 psi, 40 ft spread pattern									
Material:	LIME (95 lb/cu.ft.)			FERTILIZER (65 lb/cu.ft.)			COMPOST (50 lb/cu.ft.)		
Range:	Low	High	Low/	Low	High	Low/	Low	High	Low/
Gate (in)	lb/ac	lb/ac	Low	lb/ac	lb/ac	Low	lb/ac	lb/ac	Low
10	4,200	7,000	1,750	2,880	4,800	1,200	2,200	3,680	920
9	3,760	6,280	1,570	2,590	4,320	1,080	1,990	3,320	830
8	3,360	5,600	1,400	2,300	3,840	960	1,750	2,920	730
7	2,920	4,880	1,220	2,010	3,360	840	1,530	2,560	640
6	2,520	4,200	1,050	1,720	2,880	720	1,320	2,200	550
5	2,080	3,480	870	1,440	2,400	600	1,100	1,840	460
4	1,680	2,800	700	1,150	1,920	480	860	1,440	360
3	1,240	2,080	520	860	1,440	360	640	1,080	270
2	840	1,400	350	570	960	240	430	720	180
1	400	680	170	280	480	120	210	360	90

  

Speed	# 60 chain	# 50 chain
Range	Left Side	Right Side
High	inside pair	inside pair
Low	inside pair	outside pair
Low/Low	outside pair	outside pair

Stoltzfus Spreaders Morgantown, PA 19543 610-286-5146 Tables are for reference only

Changing Gear Ranges:

Gear ranges are selected by moving the roller chains between the different sets of sprockets:

